

Register your product
and get support at
www.philips.com/welcome

SRP1101/10




EN User Manual

PHILIPS

Table of contents

 1	Your SRP1101	3
2	Getting started	3-6
	2.1 Inserting the batteries	3
	2.2 Setting up the universal remote control	4-6
3	Using the universal remote control	6-8
	3.1 Buttons and functions	6-7
	3.2 Resetting a button to its original function	7-8
4	Service and support	8-10
	4.1 Frequently asked questions	8-10
	4.2 Need help?	10
	Helpline	10
	Brandlist	11-21
	Information to the consumer	22
	Compliance with EMF	22
	Recycling and disposal	22
	Battery information	22

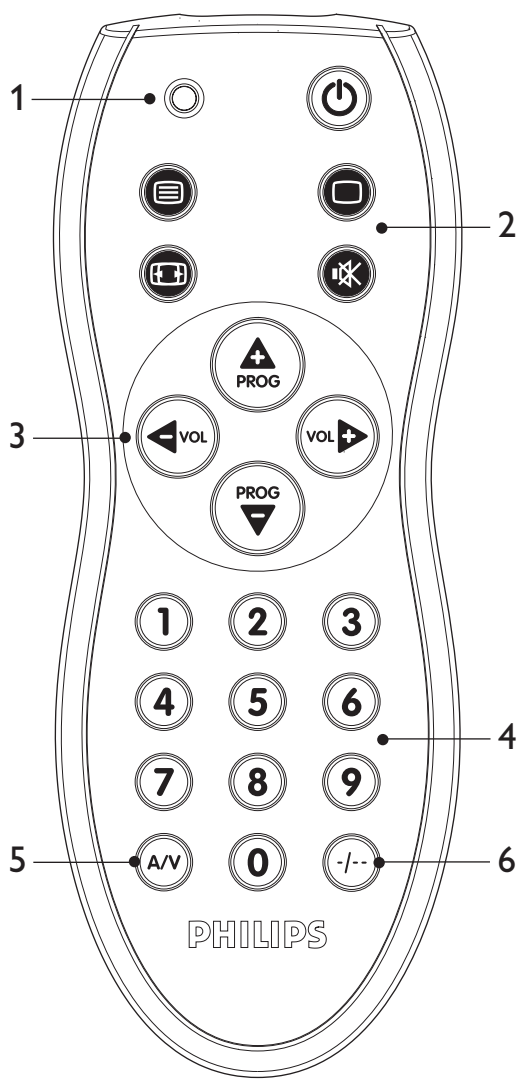

1 Your SRP1101

 
Congratulations on your purchase of the Philips SRP1101 universal remote control. After setting up the remote control you can operate the most-used functions of almost any brand of TV.

To fully benefit from the support that Philips offers, register your product at: www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

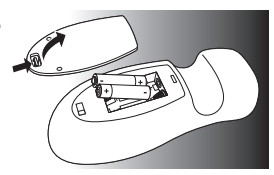

Note


When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

 
2.2 Setting up the universal remote control

The remote control can be set up to operate traditional TV, flat screen TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos.

1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

2 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds**.


- The green Setup light  lights up. The remote control is now in setup mode.


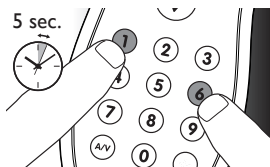



3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.


Use the digit buttons to enter the code for your brand:

  
- If the green Setup light  turns off, an invalid code was entered. In this case, try again.

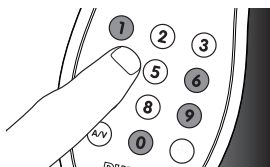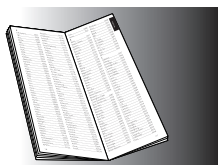


4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.

 - The remote control is now set up to operate your TV.
- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

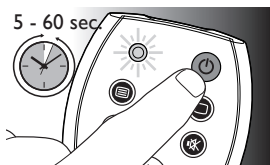

 
5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the ,  and digit buttons function properly.

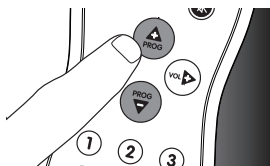

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.1.

6 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to finish setup.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

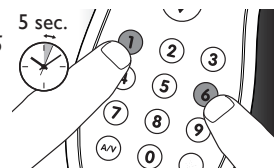

Important

If you made a mistake:

- Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Improving buttons

When correctly set up, the remote control should be able to operate your TV. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.



Note


Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

 
During initial setup

- 1 Make sure that the TV is switched on.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the TV responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

- 1 Make sure the TV is switched on.
- 2 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

- The green Setup light  lights up. The remote control is now in setup mode.

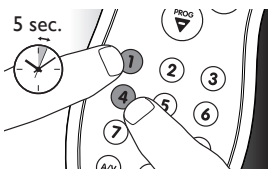


- 3 Press and hold the button that does not function and immediately release it when the TV responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

- 4 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds to save your settings and exit setup mode.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

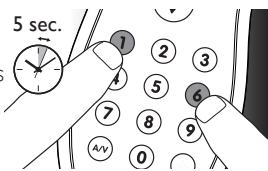



3 Using the universal remote control

3.1 Buttons and functions


The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons that you need for operating your TV.













Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1101.
- Only functions that are available on your original remote control can be used for operating your TV with the SRP1101.

- 1  setup light. Lights up when a remote control command is being sent and when the remote control is in setup mode.
-  switches the TV on/off.

 

Note


For some TV brands/types, the  button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

- 2   teletext on () / off ().
-  selects between regular (4:3) and wide screen (16:9) TV.
-  mutes TV sound.
- 3   previous/next channel.
-   adjust TV volume.
- 4 ① ② ③ digit buttons for direct channel/track selection.
④ ⑤ ⑥
⑦ ⑧ ⑨
⑩
- 5  switches between external (Audio/Video) inputs of your TV.
- 6  selects between one and two-figure channel numbers and channel numbers with more than two or three figures.

3.2 Resetting a button to its original function



 If an improved button (see chapter 2.2.1) still does not function as expected, you can always reset the button to its original function.

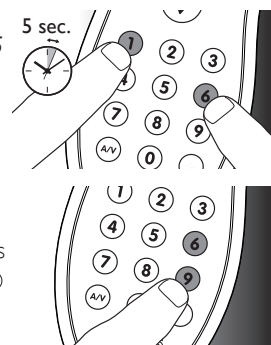- 1 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds, until the green Setup light  lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons ⑨, ⑨ and ⑥, in that order:
 - After each button press the green Setup light  blinks once.



3 Press the button that you wish to reset **twice**.

E.g. the  button.

- After each button press the green Setup light  blinks once.
- The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.



4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my TV is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV brands.

- You will find a complete brand list on page 11-21 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.1) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.1.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The TV does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control.
- Try improving buttons. See chapter 2.2.1.


Wrong code selected during setup.

- Set up the remote control again. Always test if the TV responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.1.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

Black Panther Line.....	4196	Changhai.....	0529	Daytron.....	0710	E-Dem.....	3624
Black Star.....	0386	Changhong.....	0530	DCE.....	0713 (DB1)	Elbe.....	0880
Blacktron.....	3526	Chimei.....	3563	De Graaf.....	0716	Elbe-Sharp.....	3529
Blackway.....	0388	Chuangjia.....	4096	DEC.....	0717	Elcotech.....	0882
Blaupunkt.....	0390	Chunfeng.....	0546	Decca.....	0718	Elcit.....	0883
Blue Media.....	3378 (DB1)	Chung Hsin.....	0547	Deitron.....	0722	Electa.....	3530
Blue Sky.....	0395	Chunsun.....	0549	Denko.....	0730	ELECTRO TECH.....	3531
Blue Star.....	0396	Cimline.....	0552	Denon.....	0731	Electrohome.....	0890
BlueH.....	3793 (DB1)	Cinetec.....	0560	Denver.....	0733	Elektra.....	0896
Boghe.....	0400	CineVision.....	0562	Denzel.....	0734	Element.....	3477
Bondstec.....	0403	Cinex.....	0563 (DB1)	Desay.....	0737	Elfunk.....	0899 (DB1)
Boots.....	0405	City.....	0569	Desmet.....	0738	ELG.....	0900
BPL.....	0413	Clarivox.....	0576	DGM.....	3566 (DB1)	Elin.....	0902
Brainwave.....	0415	Classic.....	0580	Diamant.....	0746	Elite.....	0903
Brandt.....	0416	Clatronic.....	0581	Diamond.....	0747	Elmak.....	0907
Brimax.....	3797 (DB1)	Clayton.....	0582 (DB1)	DICRA.....	4938 (DB1)	Elonex.....	4019 (DB1)
Brinkmann.....	0423	CMS.....	0590	Digatron.....	0751	Elsay.....	0909
Brionvega.....	0424	CMS Hightec.....	0591	Digihome.....	0758 (DB1)	Elta.....	0910
Britannia.....	0425	Coby.....	0597	Digiline.....	0759	Emerson.....	0917
Bruns.....	0435	Concorde.....	0626	DigiLogic.....	0760 (DB1)	e-motion.....	3496 (DB1)
BskyB.....	0436	Condor.....	0627	Digital Device.....	0770 (DB1)	Emperor.....	0921
BSR.....	0437	Conia.....	0628	Digitek.....	0779 (DB1)	Enzer.....	0934
BTC.....	0439	Conrowa.....	0634	Digitor.....	0781	Epson.....	0937
Bush.....	0445	Contec.....	0635	DiK.....	0787 (DB1)	Erres.....	0942
C		Continental Edison.....	0637	Dikom.....	3391 (DB1)	ESC.....	0945
Caihong.....	0462	Cosmel.....	0647	Dixi.....	0807	Etron.....	0949
Cambridge Audio.....	0470	Crosley.....	0655	DK Digital.....	0808	Etzuko.....	4203
Cameron.....	4032	Crown.....	0658	DMTech.....	0813	Eurofeel.....	0954
Capsonic.....	0486	CS Electronics.....	0663	Dongda.....	0820	EuroLine.....	0955
Carad.....	0488	CTC.....	0664	Donghai.....	0821	Euroman.....	0956
Carena.....	0489	CTC Clatronic.....	3527	Dragon Systems.....	4830 (DB1)	Europa.....	0957
Carrefour.....	0492	C-Tech.....	0449	Drean.....	0832	Europhon.....	0959
Cascade.....	0496	CVG.....	3996	DSE.....	0833	Evesham.....	0972 (DB1)
Casio.....	0499	Cybercom.....	0671 (DB1)	DTS.....	0837	Expert.....	0976
Cat.....	0500	CyberHome.....	0672	Dual.....	0838	Exquisit.....	0978
Catha.....	4094	Cybermaxx.....	3696 (DB1)	Dual-Tec.....	3528	F	
Cathay.....	0501	Cybertron.....	0675	Dumont.....	0840	Fagor Life.....	4102
Catron.....	0502	D		Duongjie.....	4101	Feilang.....	0990
CCE.....	0504	Daenyx.....	0690	Durabrand.....	0842 (DB1)	Feilu.....	0991
Celestial.....	0511	Daewoo.....	0692	Dux.....	0843	Feiyue.....	0993
Centrex.....	0516	Dainichi.....	0694	D-Vision.....	0684	Fenmenti.....	4103
Centrum.....	0519	Dansai.....	0699	DVX.....	0847	Fenner.....	0994
Centurion.....	0520	Dantax.....	0702	Dynatron.....	0855	Ferguson.....	0996
Century.....	0521	Datron.....	4201	Dynex.....	3476	Fidelity.....	0998
CGE.....	0523	Datsura.....	0703	E		Filsai.....	1000
CGV.....	0524	Dawa.....	0707	Easy Home.....	3700	Finlandia.....	1003
Changcheng.....	0526	Daytek.....	0708	Easy Living.....	0860 (DB1)	Finlux.....	1004
Changfei.....	0527	Dayton.....	0709	Eclipse.....	0867	Fintec.....	1006

Firstline.....	1008	GVG.....	1169	Humax.....	1298	Kangchong.....	1476
Fisher.....	1009	H		Hygashi.....	1308	Kanghua.....	1477
Flint.....	1014	H&B.....	3635	Hyper.....	1309	Kangwei.....	4115
FNR.....	1016	Haaz.....	1172	Hypson.....	1312	Kansai.....	1480
Formenti.....	1023	Haier.....	1175	Hyundai.....	1315	Kapsch.....	1483
Formenti-Phoenix..	1024	Haihong.....	1176	I		Karcher.....	1484
Fortress.....	1027	Halifax.....	1179	Iberia.....	1320	Kawa.....	1487
Fraba.....	1030	Hampton.....	1183	ICE.....	1324	Kawasho.....	1489
Friac.....	1040	Hanns.G.....	3478 (DB1)	ICeS.....	1325	Kendo.....	1500
Frontech.....	1042	Hannspree.....	1189 (DB1)	iDEAL.....	3641 (DB1)	Kennedy.....	1504
Fujicom.....	1048 (DB1)	Hanseatic.....	1190	lekei.....	1332 (DB1)	Kennex.....	1505
Fujitsu.....	1052	Hantarex.....	1192	lISonic.....	1334 (DB1)	Kenwood.....	1507
Fujitsu General.....	1053	Hantor.....	1193	liyama.....	1335 (DB1)	KeyPlug.....	3646
Fujitsu Siemens.....	1054 (DB1)	Harman/Kardon.....	1198	Impego.....	4207	KIC.....	1512
Funai.....	1056	Harwood.....	1204	Imperial.....	1346	Kiiro.....	1513
G		Hauppauge.....	1206	Indesit.....	1349	Kingavon.....	1519
Galaxi.....	1068	HCM.....	1210	Indiana.....	1350	Kingsley.....	1520
Galaxis.....	1069	Hema.....	1222	Ingelen.....	1354	Kiota.....	1522
GBC.....	1078	Hemmermann.....	1223	Ingersol.....	1355	Kiss.....	1524
Geant Casino.....	1082	Henss.....	1224 (DB1)	Inno Hit.....	1358	Kiton.....	1525
GEC.....	1083	Hifivox.....	1233	Innovation.....	1360	Kneissel.....	1535
Geloso.....	1087	Higashi.....	1234	Inspira.....	4296 (DB1)	Koda.....	1539
General.....	1090	Highline.....	1236	Interactive.....	3534	Kolin.....	1541
General Technic.....	1095	Hikona.....	1237	Interbuy.....	1376	Kolster.....	1543
Genexxa.....	1097	HiLine.....	3533	Interfunk.....	1377	Konig.....	1547
Gericom.....	1103	HiMAX.....	1241	Internal.....	1379	Konka.....	1548
GFM.....	3820	Hinari.....	1243	International.....	1380	Korpel.....	1552
Giant.....	1113	Hisawa.....	1247	Intervision.....	1386	Korting.....	1554
Giec.....	1115	Hisense.....	1249	IR.....	4110	Kosmos.....	1557
Global Solutions.....	1120	Hitachi.....	1251	Irradio.....	1396	Koyoda.....	1561
Global Sphere.....	1121	Hitachi Fujian.....	1252	Isukai.....	1402	KTV.....	1572
Go Video.....	1126	Hitsu.....	1257	ITC.....	1404	Kuro.....	1579
Gold.....	3823 (DB1)	Hoehner.....	1262	ITS.....	1405	KXD.....	1581
GoldHand.....	1136	Hoher.....	4504 (DB1)	ITT.....	1406	Kyoshu.....	1583
Goldline.....	1138	Home Tech Industries		ITV.....	1408	Kyoto.....	1585
GoldStar.....	1140	1266	J		L	
Goodmans.....	1142	Hongmei.....	1272	JEC.....	1426	L&S Electronic.....	1588
Gorenje.....	1144	Hornophon.....	1277	JGC.....	1434 (DB1)	Lafayette.....	1591
GPM.....	1149	Hoshai.....	1278	Jiahua.....	1435	LaSAT.....	1597
Gradiente.....	1151	Huafa.....	1287	Jinhai.....	1439	Lawson.....	1603
Graetz.....	1152	Huanghaimei.....	1288	Jinxing.....	1442	Layco.....	4117
Gran Prix.....	1153 (DB1)	Huanghe.....	1289	JVC.....	1464	Lecson.....	1606
Granada.....	1154	Huanglong.....	1290	K		Lenco.....	1615
Grandin.....	1156	Huangshan.....	1291	Kaisui.....	1471	Lenoir.....	1617
Great Wall.....	4105	Huanyu.....	1292	Kamosonic.....	3535	Lenoxx.....	1618 (DB1)
Gronic.....	1160	Huari.....	1294	Kamp.....	1475	Lesa.....	1622
Grundig.....	1162	Hugoson.....	1297 (DB1)			Leyco.....	1627
Grunkel.....	1164	Huijiban.....	4108			LG.....	1628

LG/Goldstar.....	3536	Medion.....	1787	N	Opera.....	2090	
Liesenk.....	3537	Medison.....	1788	NAD.....	1926	Optim.....	2094
Liesenk & Tter.....	1630	MegaDrive.....	4297 (DB1)	Naiko.....	1930	Orava.....	2101
Liesenkotter.....	1631	Meletronic.....	3654	Nakamichi.....	1932	Orbit.....	2103
Life.....	3538	M-Electronic.....	3541	Nakimura.....	1933	Orion.....	2111
Lifetec.....	1633	Melvox.....	1799	Naonis.....	1936	Oritron.....	2112
Limit.....	1637	Memorex.....	1800	National.....	1942	Orline.....	2113
LiteOn.....	1645	Memphis.....	1802	NEC.....	1950	Ormond.....	2114
Lloyds.....	3539	Mercury.....	1804	Neckermann.....	1951	Orson.....	2115
Lloyd's.....	1648	Metz.....	1810	NEI.....	1952	Orsowe.....	2116
Local India TV.....	1653	MiCO.....	1813	Nesco.....	1960	Osaki.....	2118
Lodos.....	1659 (DB1)	Micromaxx.....	1822	Netsat.....	1966	Osio.....	2121
Loewe.....	1660	Micromedia.....	1823	Netway.....	3419 (DB1)	Oso.....	2122
Loewe Opta.....	3540	Micromega.....	1824	Network.....	1968	Osume.....	2123
LogicLab.....	3650	Microspot.....	3849 (DB1)	Neufunk.....	1970	Otto Versand.....	2126
Logik.....	1661	Microstar.....	1827	Nevir.....	1977	Oulin.....	4123
Luma.....	1674	Migros.....	1832	New Tech.....	1979		
Lumatron.....	1676	Mikomi.....	1833 (DB1)	New World.....	1980	P	
Lux May.....	1680	Minato.....	1835	Next Base.....	1983	P&B.....	2132
Luxor.....	1683	Minax.....	1836 (DB1)	Nicamagic.....	1994	Pacific.....	2135
		Minerva.....	1838	Nikai.....	4566 (DB1)	Pael.....	2140
M		Minoka.....	1840	Nikkai.....	1998	Palladium.....	2145
M Electronic.....	1688	Minowa.....	1843	Nikkei.....	1999 (DB1)	Palsonic.....	2147
Madison.....	1698	Mirai.....	1849 (DB1)	Nimbro.....	4065 (DB1)	Panama.....	2149
Magnadyne.....	1702	Mitsai.....	3851 (DB1)	Noblex.....	2013	Panasonic.....	2153
Magnafon.....	1703	Mitsubishi.....	1855	Nobliko.....	2014	Panavision.....	2154
Magnavox.....	1706	Mivar.....	1857	Nogamatic.....	2016	Panda.....	2155
Magnex.....	1707	Mizuda.....	1860	Nokia.....	2017	PARK.....	3951 (DB1)
Magnum.....	1709	Monyka.....	1873	Nordic.....	2021	Pathe Cinema.....	2168
Majestic.....	1713	Morgans.....	3970	Nordmende.....	2022	Pathe Marconi.....	2169
Mandor.....	1717	Motion.....	1877	Nordvision.....	3543	Pausa.....	2171
Manesth.....	1718	MTC.....	1889	Normerel.....	2024	peekTon.....	2178
Manhattan.....	1719	MTEC.....	1890	Novatronic.....	2035	Pensonic.....	3778
Maqma.....	1722 (DB1)	MTlogic.....	1892	Nu-Tec.....	2048	Perdio.....	2185
Marantz.....	1724	Mudan.....	1896			Perfekt.....	2186
Marelli.....	1729	Multi System.....	3542	O		Philco.....	2192
Mark.....	1731	Multistandard.....	1904	O.K.Line.....	4301 (DB1)	Philharmonic.....	2194
Marquant.....	1734	Multisystem.....	4121	Oceanic.....	2061	Philips.....	2195
Mascom.....	1738 (DB1)	Multitec.....	1906	Okana.....	4122	Philips Magnavox.....	3715
Masuda.....	1744	Multitech.....	1907	Okano.....	2065	Phocus.....	2198 (DB1)
Matsui.....	1750	Murphy.....	1911	Omni.....	2074	Phoenix.....	2199
Matsushita.....	1751	Musikland.....	1915	ONCEAS.....	3544	Phonola.....	2201
Maxim.....	1759 (DB1)	Mustek.....	1916	Onida.....	2081	Phonotrend.....	2202
MBO.....	1765 (DB1)	Mx Onda.....	1919	Onimax.....	2082	Pioneer.....	2212
McMichael.....	1768	Myrica.....	3946 (DB1)	Onkyo.....	2085	Pionier.....	2213
MDS.....	1772 (DB1)	Mystral.....	1925	Onn.....	3663 (DB1)	Plantron.....	2219
Mecotek.....	1776			Onwa.....	2087	Playsonic.....	2224
Mediator.....	1784			Onyx.....	3864 (DB1)	Plu2.....	2225 (DB1)
Mediencom.....	1786			Oopla.....	2088	Pointer.....	2229

Polaroid.....	2230	Reflex.....	2368	Seitech.....	3433 (DB1)	Sontech.....	3435
Poppy.....	2236	Relisys.....	2374 (DB1)	Seleco.....	2528	Sony.....	2679
Portland.....	2238	Render.....	4072 (DB1)	Sencora.....	2531	Sound & Vision.....	2680
Powerpoint.....	2241	Reoc.....	2379	Sentra.....	2534	Soundmaster.....	2685
Prandoni Prince.....	4125	Revox.....	2383	Sentron.....	4216	Soundmax.....	2687
Precision.....	2244	Revoy.....	2384	Serino.....	2539	Soundwave.....	2689
Prima.....	2253	Rex.....	2385	Shanghai.....	2547	Soyo.....	2693 (DB1)
PrimeView.....	3513 (DB1)	RFT.....	2386	Shanshui.....	4133	Spectra.....	2697
Prinz.....	2260	Rhapsody.....	2387	Shaofeng.....	2549	Srypton.....	4138
Pro2.....	2265 (DB1)	Rimax.....	2391	Sharp.....	2550	Standard.....	2713
Profekt.....	4126	R-Line.....	2327	Shencai.....	2553	Star Cluster.....	3724
Profex.....	2269	Roadstar.....	2398	ShengCai.....	4217	Starlight.....	2727
Profilo.....	2272	Robotron.....	2401	Shenyang.....	2555	Starlite.....	2728
Profitronic.....	2273	Ronin.....	2412	Sherwood.....	2557	Starmedia.....	2730
Proline.....	2274	Rover.....	2415 (DB1)	Shineldo.....	4074 (DB1)	Stenway.....	2739
Promax.....	2275	Rowa.....	2416	Shintom.....	2563	Stern.....	2741
Proson.....	2281 (DB1)	Rownsonic.....	2417	Shintoshi.....	2564	Stevison.....	2742 (DB1)
Prosonic.....	2282	Royal.....	2419	Shivaki.....	2567	Strato.....	2745
Protech.....	2284	Royal Lux.....	2420	Shorai.....	2569	Strong.....	2748 (DB1)
ProVision.....	2291	RTF.....	3548	Siam.....	2572	Stylandia.....	2752
Pye.....	2302			Siarem.....	2573	Sungoo.....	3767 (DB1)
Pyle.....	2303 (DB1)	S		Siemens.....	2574	Sunkai.....	2762
Pymi.....	2304	Saba.....	2429	Siera.....	2576	Sunstar.....	2768
		Sabaki.....	2430	Sierra.....	3549	Suntronic.....	2770
Q		Sagem.....	2434	Siesta.....	2577	Sunwood.....	2772
Quandra Vision.....	3546	Saisho.....	2437	Sigmatek.....	2580	Superla.....	2782
Quasar.....	2320	Saivod.....	2439	Silva.....	2591	Supersonic.....	2787
Quelle.....	2322	Salora.....	2443	Silva Schneider.....	2592	SuperTech.....	2789
Questa.....	2324	Sambers.....	2445	Silver.....	2594	Supervision.....	2791
		Sampo.....	2446	Singer.....	2599	Supra.....	2792
R		Samsung.....	2448	Sinudyne.....	2601	Supratech.....	2793 (DB1)
Radialva.....	2329	Samurai.....	2451	Skantic.....	2605	Susumu.....	2797
Radio.....	4128	Sandra.....	2454	SKY.....	2610	Sutron.....	2798
Radio Shack.....	3547	Sansui.....	2458	Skymaster.....	2621	Swedx.....	2803 (DB1)
Radiola.....	2330	Sanwa.....	2461	Skyworth.....	2631	Swissflex.....	2805 (DB1)
Radiomarelli.....	2331	Sanyo.....	2462	Slim Art.....	2636	Swisstec.....	2806 (DB1)
Radionette.....	2332	Sanyuan.....	2464	SM Electronic.....	2639	Sydney.....	2808
RadioShack.....	2333	Saville.....	2491	Smart.....	2642 (DB1)	Sylvania.....	2809
Radiotone.....	2334	SBR.....	2492	S-Media.....	3515 (DB1)	Symphonic.....	2810
Raite.....	2340	ScanMagic.....	2496	Sogera.....	2649	Synn.....	2813
Rank.....	2345	Schaub Lorenz.....	2500	Solavox.....	2654	Syline.....	2815
RBM.....	2350	Schneider.....	2501	Sonawa.....	2663	Sytong.....	2820
RCA.....	2351	Schoentech.....	3504 (DB1)	Songdian.....	4136		
REC.....	2357	Scientific Labs.....	2504	Soniko.....	2669	T	
Recor.....	2359	Scott.....	2508	Sonitron.....	2671	T.D.E. Systems.....	2822
Rectiligne.....	2362	Seeltech.....	2519	Sonneclair.....	2673	Tactus.....	2825
Red Star.....	3669 (DB1)	SEG.....	2522	Sonoko.....	2675	Taishan.....	2835
Rediffusion.....	2364	SEI.....	2524	Sonolor.....	2676	Taisho.....	2836
Redstar.....	2366	Sei-Sinudyne.....	2525	Sontec.....	2677	Tandberg.....	2842

Tandy.....	2843	Tokyo	3004	Videoton.....	3174	X	
Tashiko	2850	Tomashi	3006	Viewmaster	3182	Xbox	3295
Tatung.....	2852	Tom-Tec	3005 (DB1)	Viewsonic	3186	Xiahua	3299
TCL.....	2856	Tonsai.....	4223	Viore	3192 (DB1)	Xiangyu.....	3302
TCM.....	2857	Top Suxess.....	3013	Visiola.....	3197	Xingfu.....	3305
Teac.....	2860	Toshiba.....	3021	Vision	3198	Xinghai	3306
Teachimagen	4140	Towada	3028	Vistar.....	3207	Xinrisong	3308
Tec.....	2861	Towika	4224	Visual Innovations ..	4773 (DB1)	XLogic.....	3310
Tech Line	2863	Toyoda.....	3030	Vivax.....	3601 (DB1)	XMS.....	3312
Techica	2865	Trakton	3036	Vivid.....	3210 (DB1)	Xoro.....	3315
Technema.....	2866	Trans Continens.....	3037	Vortec	3217	Xrypton.....	3317
Technica.....	2868 (DB1)	TRANS-continents.	3039	Voxson	3220	Xuelian.....	3320
Technics.....	2869	Transfec	4143				
Technika.....	2870	Transonic	3041	W		Y	
TechniSat.....	2873	Transtec.....	3042	Waitec.....	3227	Yakumo.....	3324
Technisson.....	2874 (DB1)	Trident.....	3054	Waltham	3230	Yamada	3325
Techvision.....	4307 (DB1)	Trio.....	3056	Watson	3233	Yamaha	3326
Techwood	2884 (DB1)	Tristar.....	3057	Watt Radio.....	3234	Yamakawa	3327
Teco	2886 (DB1)	Triumph	3058	Wega.....	3238	Yamishi	3328
Tedex.....	2889	TruVision.....	3061	Wegavox.....	3239	Yokan	3335
Teleavia	2901	TSM	3065	Welkin	3242 (DB1)	Yoko.....	3336
Telecor	2910	TVA.....	4225	Wellington	3243 (DB1)	Yorx.....	3340
Telefunken.....	2914	TVE.....	3897 (DB1)	Welltech.....	3244	Yuhang.....	3345
Telefusion.....	2915			Weltblick.....	3245	Yukai.....	3346
Telegazi	2917	U		Weltstar.....	3247 (DB1)	Yüsmart.....	4777 (DB1)
Telemeister	2924	Uher	3089	Weston.....	3251		
Telesonic	2930	Ultravox.....	3095	WestStar.....	3519 (DB1)	Z	
Telestar.....	2931	Umax.....	3098	Wharfedale.....	3255	Zanussi.....	3349
Telesystem	2933 (DB1)	UMC.....	3099 (DB1)	White Westinghouse		Zenith.....	3356
Teletech.....	2934	Unic Line.....	3100	3258	ZhuHai.....	3364
Teleton	2935	Union.....	3781	Wilson.....	3260 (DB1)		
Televideon.....	2938	United	3106	Windsor.....	3265 (DB1)		
Television	2939	United Quick Star..	4226	Windstar.....	3266		
Televiso	2941	Universal.....	3113	Wintel	3271 (DB1)		
Temco.....	2946	Universum	3115	World-of-Vision.....	3282 (DB1)		
Tennessee.....	2952	Univox.....	3116	Woxter	3286		
Tenosal.....	2953						
Tensai	2954	V					
Tenson.....	2955	V7 Videoseven.....	3130 (DB1)				
Tesla.....	3680 (DB1)	Vestel	3148				
Tesmet.....	3550	Vexa.....	3149				
Tevion.....	2962	Vibrant	3154				
Textet	2963	Victor.....	3155				
Thes.....	3769 (DB1)	Videologic.....	3165				
Thomson	2972	Videologique.....	3166				
Thorn.....	2974	Videon.....	4227				
Tiankeban.....	4142	Videosat	3170				
Tobo	2999	VideoSystem.....	3172				
Tokai	3001	Videotechnic.....	3173				

(DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.



EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner:
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5359 3

December 2011

www.philips.com

RTP/4911