

Register your product
and get support at
www.philips.com/welcome

SRP4004/86



EN User Manual

PHILIPS

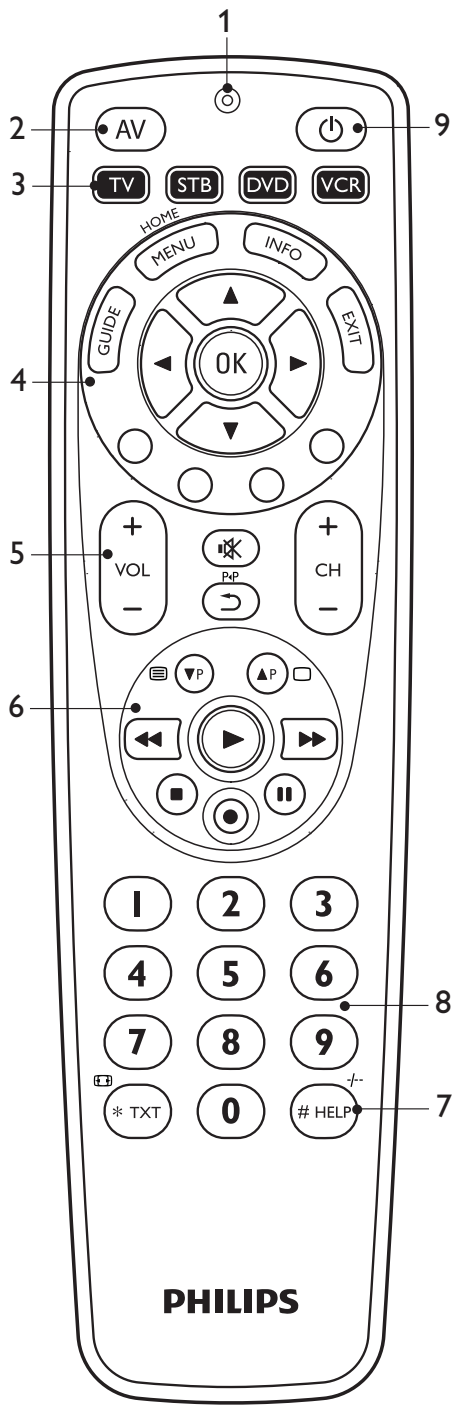 


Table of contents

1	Your SRP4004	3
2	Getting started	4-7
	2.1 Inserting the batteries	4
	2.2 Setting up the universal remote control	4-8
3	Using the universal remote control	8-10
	3.1 Buttons and functions	8-10
	3.2 Resetting a button to its original function	10
4	Service and support	11-13
	4.1 Frequently asked questions	11-12
	4.2 Need help?	13
	Helpline	14
	Brandlist	15-30
	Information to the consumer	31
	Compliance with EMF	31
	Recycling and disposal	31
	Battery information	31

1 Your SRP4004

Congratulations on your purchase of the Philips SRP4004 universal remote control. After setting up the remote control you can operate up to 4 different devices with it.

Simple Setup

Improved with Philips patented (pending) Simple Setup technology, the SRP4004 can be set up easily for TV, DVD player / recorder, VCR and all common set-top boxes, such as Sky, British Telecom, Orange, Freebox, TNT, Canal Digital, Telefonica, Premiere, Kabel Deutschland, Belgacom TV, Telenet, Viasat and many more.

Simply follow the instructions in chapter **2.2** to set up the remote control for your devices.

Glow buttons

 
The remote control glow buttons (-VOL +, - CH + and numeric buttons) light up in the dark, enabling easy use of the remote control, even in a dimly lit room

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

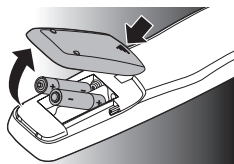

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote controls for your TV.

You can repeat the same steps for other devices (STB, DVD player/recorder and VCR) which you want to operate, using the SRP4004.


The remote control can be set up to operate any 4 of the following devices:

Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos
STB	Cable box, satellite receiver; Digital Video Broadcasting Terrestrial device (DVB-T), Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV)
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos
VCR	Video cassette player / recorder; VCR part of TV / VCR, TV / VCR / DVD and VCR / DVD combos

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

 - 2 **Press and hold** the device selection button **for 5 seconds** until the red Setup LED lights up. The remote control is now in setup mode.

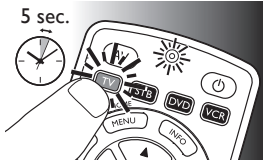

- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual. A four-digit code is shown for each brand.

 


Use the digit buttons to enter the code for your brand.

- If the red Setup LED turns off, an invalid code was entered. In this case, try again.



- 4 Aim the remote control at the TV. **Press and hold** the button. Release it **immediately** as soon the TV switches off.

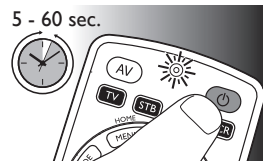

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

- 5 **Switch ON** the TV. Try out the buttons you need for operating it. Try, for example, if the - CH + and digit buttons function properly.



- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

 
- 6 Press the device selection button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.






! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup.
The red Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (STB, DVD player / recorder and VCR)

- 1 Make sure the device is switched on and operational.
E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the remote control for your TV'. Make sure to use the correct device selection button: ,  or .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.

≡ Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').


During initial setup

 
- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.



After initial setup


- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.


- 2 Select the device you wish to operate (e.g. DVD).

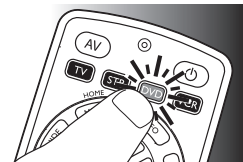Press the  device selection button to select DVD.




- 3 Keep buttons  and  pressed **simultaneously for 5 seconds**.

 - The red Setup LED  lights up. The remote control is now in setup mode.

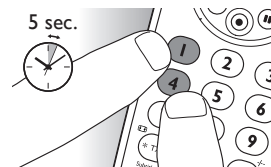


- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

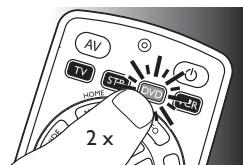




3 Using the universal remote control


3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

 Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP4004 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP4004.

 - 1  Setup LED. Lights up red when the remote control is in setup mode.
- 2  switches between external (Audio / video) inputs of your equipment.
- 3  device selection buttons.
- select the device to be operated.
 - light up when a remote control command is being sent.

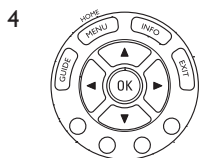


GUIDE electronic program guide.
MENU / HOME ... menu on / off.
INFO on-screen channel information.
EXIT exits / clears on-screen menu displays.

▲ ▼ ◀ ▶ cursor up, down, left, right in a menu.


OK confirms your selection.

 Colored buttons. Teletext / context sensitivity buttons.




+VOL - adjusts TV volume.

 mutes TV sound.

 previous program / Last.

 + CH - previous / next channel.

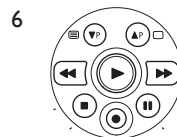

▼P ▲P previous (▼P) / next (▲P) page / track in various modes.

 teletext on (■) / off (□).

◀ rewind.

▶ play.


▶▶ fast forward.

■ stop.


● record.


|| pause.



*** TXT / **
 • wide screen.
 • STB: text.

  HELP / -/-
 • selects between one and two-figure channel numbers and channel numbers with more than two or three figures.
 • STB: Help.

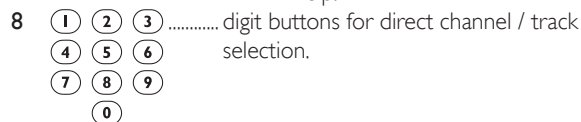

8  digit buttons for direct channel / track selection.

9  switches the selected device on / off.

Note

For some TV brands / types, this button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

 
- 1 In the current device mode, keep digit buttons 1 and 2 pressed simultaneously for 5 seconds, until the red Setup LED lights up.
 - The remote control is now in setup mode.



- 2 Press digit buttons 3, 4, and 5, in that order.
 - After each button press the device selection button blinks once.



- 3 Press the button you wish to reset twice. E.g. the Play button.
 - After each button press the device selection button blinks once.
 - The device selection button will blink one more time to confirm that the button was successfully reset to its original function.

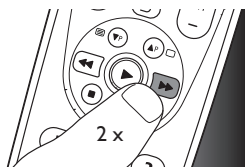

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, STB, DVD player / recorder and VCR brands.

- You will find a complete brand list on page 15-30 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.



Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.2.
- Check whether you are using the correct buttons to switch on Teletext. For TV this is the  button; for STB this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP4004, you can always contact us.

When calling our helpline, make sure to have the SRP4004 at hand when you call, so that our operators can help you determine whether the SRP4004 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP4004/86.

Date of purchase:

...../...../.....
(day/month/year)

For **online support** go to: www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.

Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

@sat.....	0008 (DB1)	Alltech.....	0109
1&1.....	3908	Alpha.....	0112
4Kus.....	0005	Altai.....	3690
		Ambassador.....	0120
A		Amitech.....	0130
A.R. Systems.....	0012	Amitronica.....	0131
AB Sat.....	3689	Amoi.....	0132
ABC.....	0013	Ampere.....	0134
Acme.....	3521	Amplivision.....	0138
Acoustic Solutions.....	0032 (DB1)	Amstrad.....	0140
Acura.....	0036	AMW.....	0143
ADA.....	0038	Anam.....	0146
ADB.....	0039	Anam National.....	0147
ADC.....	0040	Andersson.....	0148 (DB1)
Addison.....	0043	Andover.....	0149
Adelsound.....	0044	Anglo.....	0151
ADL.....	0045 (DB1)	Anitech.....	0154
Admiral.....	0046	Ankaro.....	0155
Advent.....	0054 (DB1)	Ansonic.....	0156
Adyson.....	0058	Anttron.....	0162
AEG.....	0059	AOC.....	0165
Aegir.....	0060	Apex.....	3691
Agashi.....	0063	Apollo.....	0171
Agazi.....	3522	Arc En Ciel.....	0178
AGB.....	0064	Arcam.....	0179
AGS.....	0067	Arcam Delta.....	3524
Aiko.....	0069	Arcelik.....	4791 (DB1)
Aim.....	0070	Arcom.....	3736 (DB1)
Airis.....	0071	Arcon.....	0182
Aiwa.....	0072	Ardem.....	0184
Akado.....	3784 (DB1)	Aristona.....	0192
Akai.....	0074	Armstrong.....	0195
Akiba.....	0078	Arnion.....	0196 (DB1)
Akito.....	0082	Arthur Martin.....	0200
Akura.....	0083	ASA.....	0202
Alaron.....	0085	Asat.....	0204
Alba.....	0086	Asberg.....	0205
Alcatel.....	0089	ASLF.....	0211
Alcyon.....	0093	Asono.....	0212
Aldes.....	0094	AssCom.....	0215 (DB1)
Alice.....	0098 (DB1)	AST.....	0216
Alize.....	0100	Astacom.....	0217
Alkos.....	3523	Aston.....	0220
Allantide.....	0102	Astra.....	0221
Allegro.....	0103	Astro.....	0224
Allorgan.....	0105	Asuka.....	0227
Allsat.....	0106	Atacom.....	0228
Allsonic.....	0107	Atec.....	0230 (DB1)
Allstar.....	0108	Atlanta.....	0232 (DB1)

Atlantic.....	0233	Binatone.....	0378	Canal+	0478	Colombia.....	0599
Atori.....	0237	Birmingham Cable		Capsonic.....	0486	Columbia.....	0604
Atsat.....	0238 (DB1)	Communications....	0382	Carad.....	0488	Columbus.....	0605
Auchan.....	0240	Black Diamond.....	0384 (DB1)	Carena.....	0489	Com Hem.....	4561 (DB1)
Audiosonic.....	0264	Black Panther Line.	4196	Carrefour.....	0492	Comag.....	0606
Audioton	0266	Black Star.....	0386	Cascade.....	0496	Comcrypt.....	0610
Audix	0270 (DB1)	Blacktron.....	3526	Casio	0499	Commlink.....	0616
Aurora.....	0274	Blackway.....	0388	Cat.....	0500	Comtech.....	3776
Ausind.....	0276	Blaupunkt.....	0390	Catha	4094	Concorde.....	0626
Austar.....	0277	Blue Media.....	3378 (DB1)	Cathay.....	0501	Condor.....	0627
Autovox.....	0280	Blue Sky.....	0395	Catron.....	0502	Conia.....	0628
Avalon.....	0286	Blue Star.....	0396	CCE.....	0504	Connexions.....	0631
Avanit.....	4945 (DB1)	BlueH.....	3793 (DB1)	Celestial.....	0511	Conrad.....	0633
Avious.....	0291	Boca.....	0399	Centrex.....	0516	Conrad Electronic..	3695
AVM.....	0294	Boghe.....	0400	Centrum.....	0519	Conrowa.....	0634
Awa.....	0296	Bondstec.....	0403	Centurion.....	0520	Contec.....	0635
Axiel.....	0297	Boots.....	0405	Century.....	0521	Continental Edison	0637
Axil.....	0298 (DB1)	Boston.....	0410	CGE.....	0523	Cosat.....	0645
Axis.....	0300	BPL.....	0413	CGV.....	0524	Coship.....	0646
Axitronic.....	3608 (DB1)	Brainwave.....	0415	Changcheng.....	0526	Cosmel.....	0647
Axxon.....	0303 (DB1)	Brandt.....	0416	Changfei.....	0527	Crosley.....	0655
Ayomi.....	3525	Brimax.....	3797 (DB1)	Changhai.....	0529	Crown.....	0658
		Brinkmann.....	0423	Changhong.....	0530	Cryptovision.....	0661
B		Brionvega.....	0424	Channel Master.....	0531	CS Electronics.....	0663
B&D.....	3609 (DB1)	Britannia.....	0425	Chaparral.....	0533	CTC.....	0664
Baird.....	0311	British Telecom.....	0427	Cherokee.....	0536	C-Tech.....	0449
Bang & Olufsen.....	0314	Broadcast.....	0428	Chess.....	0538	CVG.....	3996
Barcom	0320	Broco.....	0431	Chimei.....	3563	Cybercom.....	0671 (DB1)
BARON.....	3959	Bruns.....	0435	Chuangjia.....	4096	CyberHome.....	0672
Basic Line.....	0325	BskyB.....	0436	Chunfeng.....	0546	Cybermaxx.....	3696
Bastide.....	0327	BSR.....	0437	Chung Hsin.....	0547	Cybertron.....	0675
Baur.....	0331	BT.....	0438	Chunsun.....	0549	Cyfrowy Polsat.....	4341 (DB1)
Baze.....	0334	BT Cable.....	3995	Cimline.....	0552	Cyrus.....	0679
Bazin.....	0335	BT Satellite.....	3693	Cinetec	0560		
BBK.....	0337	BT Vision.....	3742	CineVision.....	0562	D	
BBT.....	0338	BTC.....	0439	Cisco.....	3801 (DB1)	Daenyx.....	0690
Beijing.....	0345	Bubu Sat.....	0440	City.....	0569	Daeryung.....	0691
Beko.....	0346	Bush.....	0445	CityCom.....	0570	Daewoo.....	0692
Belgacom TV.....	0349	BVV.....	0447	Clarivox.....	0576	Dainichi.....	0694
Bell Atlantic.....	0351			Classic.....	0580	Dansai.....	0699
Bellagio.....	0354	C		Clatronic.....	0581	Dansat.....	0700
Belson.....	0355 (DB1)	Cabletime.....	0457	Clayton.....	0582 (DB1)	Dantax.....	0702
Benjamin.....	0358	Caihong.....	0462	Clyde.....	0588	Darty.....	4266 (DB1)
BenQ.....	0359	Cambridge.....	0469	Clyde Cablevision..	3694	Darty Box.....	4228
Beon.....	0361	Cambridge Audio ..	0470	CMR.....	4694 (DB1)	Datron.....	4201
Best.....	0364	Cameron.....	4032	CMS.....	0590	Datsura.....	0703
Best Buy.....	0365	Camundosat.....	0474	CMS Hightec.....	0591	Dawa.....	0707
Bestar.....	0368	Canal Digital.....	0476	CNT.....	0594	Daytek.....	0708
Bestar-Daewoo.....	0369	Canal Satellite.....	0477	Coby.....	0597	Dayton.....	0709

Daytron.....	0710	DNT.....	0816	Elsat.....	0908	Filmnet Comcrypt..	3702
D-box.....	0682	Dongda.....	0820	Elsay.....	0909	Filsai.....	1000
DCE.....	0713 (DB1)	Donghai.....	0821	Elta.....	0910	Finlandia.....	1003
DDC.....	0714	Dragon Systems.....	4830 (DB1)	Emanon.....	0913	Finlux.....	1004
De Graaf.....	0716	Drake.....	0825	Emerson.....	0917	FinnSat.....	1005
DEC.....	0717	DREAMBOX.....	4392 (DB1)	Emme Esse.....	0919	Fintec.....	1006
Decca.....	0718	Drean.....	0832	e-motion.....	3496 (DB1)	Firstline.....	1008
Decsat.....	0719	DSE.....	0833	Emperor.....	0921	Fisher.....	1009
Deitron.....	0722	DSTV.....	0835	eMTech.....	3626 (DB1)	Flair Mate.....	1010
Delega.....	3697	DTS.....	0837	Engel.....	0929	Flint.....	1014
Denko.....	0730	Dual.....	0838	Enzer.....	0934	FNR.....	1016
Denon.....	0731	Dual-Tec.....	3528	EP Sat.....	0935	Formenti.....	1023
Denver.....	0733	Dumont.....	0840	Epson.....	0937	Formenti-Phoenix...	1024
Denzel.....	0734	Dune.....	0841	Erres.....	0942	Fortress.....	1027
Desay.....	0737	Duongjie.....	4101	ESC.....	0945	Foxtel.....	1029
Desmet.....	0738	Durabrand.....	0842 (DB1)	Etron.....	0949	Fraba.....	1030
Dew.....	0742	Dux.....	0843	Etzuko.....	4203	Fracarro.....	1032 (DB1)
DGM.....	3566 (DB1)	D-Vision.....	0684	Eurieult.....	0950	France Satellite/TV.	3703
Dgtec.....	0745 (DB1)	DVX.....	0847	Eurocrypt.....	0952	France Telecom.....	1033
Diamant.....	0746	Dynasat.....	0852	Eurodec.....	0953	Free.....	4157
Diamond.....	0747	Dynatron.....	0855	Eurofeel.....	0954	Freebox.....	1036
DICRA.....	4938 (DB1)	Dynex.....	3476	EuroLine.....	0955	Freecom.....	1037
Digatron.....	0751			Euroman.....	0956	Freesat.....	1038
Digitality.....	0755	E		Europa.....	0957	Friac.....	1040
Digihome.....	0758 (DB1)	Easy Home.....	3700	European.....	0958	Frontech.....	1042
Digiline.....	0759	Easy Living.....	0860 (DB1)	Europhon.....	0959	FTE.....	1043
DigiLogic.....	0760 (DB1)	Echostar.....	0866	Eurosat.....	0962	FTEmaximal.....	1044
Digipro.....	0762	Eclipse.....	0867	Eurosky.....	0963	Fuba.....	1045
DigiQuest.....	0763 (DB1)	E-Dem.....	3624	Eurospace.....	0964	Fugionkyo.....	1046
Digital Device.....	0770 (DB1)	Edision.....	3392 (DB1)	Eurostar.....	0965	Fujicom.....	1048 (DB1)
Digitek.....	0779 (DB1)	Einhell.....	0875	Eutelsat.....	0967	Fujitsu.....	1052
Digitenne.....	4942 (DB1)	Elap.....	0877	Eutra.....	0968	Fujitsu General.....	1053
Digitor.....	0781	Elbe.....	0880	Evesham.....	0972 (DB1)	Fujitsu Siemens.....	1054 (DB1)
Digiturk.....	0783	Elbe-Sharp.....	3529	Exator.....	0974	Funai.....	1056
DiK.....	0787 (DB1)	Elcatech.....	0882	Expert.....	0976		
Dikom.....	3391 (DB1)	Elcit.....	0883	Exquisit.....	0978		
DirecTV.....	0794 (DB1)	Electa.....	3530			G	
Discoverer.....	0796	ELECTRO TECH.....	3531			Galaxi.....	1068
Discovery.....	0797	Electrohome.....	0890	F		Galaxis.....	1069
Diseqc.....	3698	Electus.....	0894	Fagor Life.....	4102	Galaxisat.....	1070
DishTV.....	0801 (DB1)	Elekta.....	0895	Fait.....	4699 (DB1)	Gardiner.....	1073
Diskxpress.....	0802	Elektra.....	0896	Feilang.....	0990	GBC.....	1078
Distratel.....	0804	Element.....	3477	Feilu.....	0991	GbSAT.....	1079 (DB1)
Distrisat.....	0805	Elfunk.....	0899 (DB1)	Feiyue.....	0993	Geant Casino.....	1082
Ditristrad.....	3699	ELG.....	0900	Fenmenti.....	4103	GEC.....	1083
Dixi.....	0807	Elin.....	0902	Fenner.....	0994	Geloso.....	1087
DK Digital.....	0808	Elite.....	0903	Ferguson.....	0996	General.....	1090
DMTech.....	0813	Elmak.....	0907	Fidelity.....	0998	General Instrument	1093
DNR.....	0815	Elonex.....	4019 (DB1)	Filmnet.....	0999	General Satellite.....	1094 (DB1)
				Filmnet Cablecrypt	3701	General Technic.....	1095

Genexxa.....	1097	Harting und Helling	1201	Huth.....	1305	Jiahua.....	1435
Gericom.....	1103	Harwood.....	1204	Hygashi.....	1308	Jinhai.....	1439
GFM.....	3820	Hase & Igel.....	1205	Hyper.....	1309	Jinxing.....	1442
Giant.....	1113	Hathw@y.....	3399 (DB1)	HyperVision.....	1311	Johansson.....	1449
Giec.....	1115	Hauppauge.....	1206	Hypson.....	1312	JOK.....	1451
Global Solutions.....	1120	HB.....	1209 (DB1)	Hyundai.....	1315	JSR.....	1459
Global Sphere.....	1121	HCM.....	1210			JVC.....	1464
Globo.....	1122 (DB1)	Heliocom.....	1218	I			
GMI.....	1124	Helium.....	1220	Iberia.....	1320	K	
Go Video.....	1126	Hema.....	1222	ICE.....	1324	Kabel Deutschland	1468
Gold.....	3823 (DB1)	Hemmermann.....	1223	ICeS.....	1325	Kabel Digital.....	4448 (DB1)
Gold Box.....	1131	Henss.....	1224 (DB1)	ID Digital.....	1329	Kaisui.....	1471
Golden Channel.....	1133	Hifivox.....	1233	Ileki.....	1332 (DB1)	Kamm.....	1474
GoldHand.....	1136	Higashi.....	1234	IlSonic.....	1334 (DB1)	Kamosonic.....	3535
Goldline.....	1138	Highline.....	1236	Iiyama.....	1335 (DB1)	Kamp.....	1475
GoldStar.....	1140	Hikona.....	1237	Imex.....	1344	Kangchong.....	1476
Gooding.....	1141	HiLine.....	3533	Impego.....	4207	Kanghua.....	1477
Goodmans.....	1142	HiMAX.....	1241	Imperial.....	1346	Kangwei.....	4115
Gorenje.....	1144	Hinari.....	1243	Indesit.....	1349	Kansai.....	1480
GPM.....	1149	Hirschmann.....	1246	Indiana.....	1350	Kansas Technologies	
Gradiente.....	1151	Hisawa.....	1247	Indovision.....	1351 (DB1)	1481 (DB1)
Graetz.....	1152	Hisense.....	1249	Ingelen.....	1354	Kaon.....	1482 (DB1)
Gran Prix.....	1153 (DB1)	Hitachi.....	1251	Ingersol.....	1355	Kapsch.....	1483
Granada.....	1154	Hitachi Fujian.....	1252	Inno Hit.....	1358	Karcher.....	1484
Grandin.....	1156	Hitsu.....	1257	Innovation.....	1360	Kathrein.....	1486
Great Wall.....	4105	HNE.....	1260	Interactive.....	3534	Kathrein Eurostar....	3707
Gronic.....	1160	Hoerher.....	1262	Interbuy.....	1376	Kawa.....	1487
Grothusen.....	1161	Hoher.....	4504 (DB1)	Interfunk.....	1377	Kawasho.....	1489
Grundig.....	1162	Home Tech Industries		Internal.....	1379	Kendo.....	1500
Grunkel.....	1164	1266	International.....	1380	Kennedy.....	1504
G-Sat.....	1067	Homecast.....	1268	Interstar.....	1383	Kennex.....	1505
GVG.....	1169	HomeChoice.....	1269	Intertronic.....	1384	Kenwood.....	1507
		Hongmei.....	1272	Intervision.....	1386	Key West.....	1509
H		Hornet.....	1276 (DB1)	InVideo.....	1388	KeyPlug.....	3646
H&B.....	3635	Hornophon.....	1277	IR.....	4110	KIC.....	1512
Haaz.....	1172	Hoshai.....	1278	Irradio.....	1396	Kiiri.....	1513
Haensel & Gretel....	1173	Houston.....	1280	Isukai.....	1402	Kingavon.....	1519
Haier.....	1175	Huafa.....	1287	ITC.....	1404	Kingsley.....	1520
Haihong.....	1176	Huanghaimei.....	1288	ITS.....	1405	Kiota.....	1522
Halifax.....	1179	Huanghe.....	1289	ITT.....	1406	Kiss.....	1524
Hallo.....	4563 (DB1)	Huanglong.....	1290	ITT Nokia.....	1407	Kiton.....	1525
Hampton.....	1183	Huangshan.....	1291	ITV.....	1408	Klap.....	1526
Hanns.G.....	3478 (DB1)	Huanyu.....	1292			Kneissel.....	1535
Hannspree.....	1189 (DB1)	Huari.....	1294	J		Koda.....	1539
Hanseatic.....	1190	Hughes Network		Janeil.....	1414	Kolin.....	1541
Hantarex.....	1192	Systems.....	1296 (DB1)	JEC.....	1426	Kolon.....	1542
Hantor.....	1193	Hugoson.....	1297 (DB1)	Jepssen.....	1430 (DB1)	Kolster.....	1543
Hanuri.....	1194	Huijiaban.....	4108	Jerrold.....	1431	Konig.....	1547
Harman/Kardon.....	1198	Humax.....	1298	JGC.....	1434 (DB1)	Konka.....	1548

Nimbro.....	4065 (DB1)	Orsowe.....	2116	Polsat.....	3716	RadioShack.....	2333
Noblex.....	2013	Osaki.....	2118	Poppy.....	2236	Radiotone.....	2334
Nobliko.....	2014	OSAT.....	2119	Portland.....	2238	Radix.....	2335
Nogamatic.....	2016	Osio.....	2121	Powerpoint.....	2241	Rainbow.....	2339
Nokia.....	2017	Oso.....	2122	Prandoni Prince.....	4125	Raite.....	2340
Nomex.....	2018	Osume.....	2123	Precision.....	2244	Rank.....	2345
Noos.....	2019	Otto Versand.....	2126	Predki.....	2245	RBM.....	2350
Nordic.....	2021	Oulin.....	4123	Preisner.....	2246	RCA.....	2351
Nordmende.....	2022	Oxford.....	2131	Premiere.....	3666	Rebox.....	2356 (DB1)
Nordvision.....	3543			Priesner.....	3717	REC.....	2357
Normerel.....	2024	P		Prima.....	2253	Recor.....	2359
Northcoast.....	2026	P&B.....	2132	PrimeView.....	3513 (DB1)	Rectiligne.....	2362
Nova.....	2031	Pace.....	2134	Prinz.....	2260	Red Star.....	3669
Novaplex.....	2034	Pacific.....	2135	Pro Basic.....	3593 (DB1)	Rediffusion.....	2364
Novatronic.....	2035	Packsat.....	2139	Pro2.....	2265 (DB1)	Redpoint.....	2365
Novis.....	2036	Pael.....	2140	Profekt.....	4126	Redstar.....	2366
NTC.....	2045	Palcom.....	2144	Profex.....	2269	Reflex.....	2368
NTL.....	2047	Palladium.....	2145	Profile.....	2271	Regency.....	2371
Nu-Tec.....	2048	Palsat.....	2146	Profilo.....	2272	Relisis.....	2374 (DB1)
		Palsonic.....	2147	Profitronic.....	2273	Render.....	4072 (DB1)
O		Panama.....	2149	Proline.....	2274	Reoc.....	2379
Oceanic.....	2061	Panasat.....	2151	Promax.....	2275	Revox.....	2383
Octagon.....	2062	Panasonic.....	2153	Prosat.....	2278	Revoy.....	2384
Okana.....	4122	Panavision.....	2154	Proson.....	2281 (DB1)	Rex.....	2385
Okano.....	2065	Panda.....	2155	Prosonic.....	2282	RFT.....	2386
Omni.....	2074	PARK.....	3951 (DB1)	Protech.....	2284	Rhapsody.....	2387
ONCEAS.....	3544	Pathe Cinema.....	2168	Protek.....	2285	Rimax.....	2391
Onida.....	2081	Pathe Marconi.....	2169	ProVision.....	2291	Ritar.....	4718 (DB1)
Onimax.....	2082	Patriot.....	2170	PVP Stereo Visual Matrix.....	2301	R-Line.....	2327
Onkyo.....	2085	Pausa.....	2171	2301	Roadstar.....	2398
Onn.....	3663 (DB1)	peekTon.....	2178	Pye.....	2302	Robotron.....	2401
Ono.....	2086	Pensonic.....	3778	Pyle.....	2303 (DB1)	Roch.....	2402
Onwa.....	2087	Perdio.....	2185	Pymi.....	2304	Rockdale.....	2403
Onyx.....	3864 (DB1)	Perfekt.....	2186	Pyxis.....	2305	Ronin.....	2412
Oopla.....	2088	Philco.....	2192			Rover.....	2415
Opera.....	2090	Philharmonic.....	2194	Q		Rowa.....	2416
Optex.....	2093	Philips.....	2195	Quadral.....	2314	Rownsonic.....	2417
Optim.....	2094	Phillips Magnavox.....	3715	Quandra Vision.....	3546	Royal.....	2419
Optus.....	2100	Phocus.....	2198 (DB1)	Quasar.....	2320	Royal Lux.....	2420
Orange.....	3866	Phoenix.....	2199	Quelle.....	2322	RTF.....	3548
Orava.....	2101	Phonola.....	2201	Questa.....	2324		
Orbit.....	2103	Phonotrend.....	2202	Quiero.....	3718	S	
Orbitech.....	2104	Pioneer.....	2212			SAB.....	2428 (DB1)
Origo.....	2110	Pionier.....	2213	Radialva.....	2329	Saba.....	2429
Orion.....	2111	Plantron.....	2219	Radio.....	4128	Sabaki.....	2430
Oritron.....	2112	Playsonic.....	2224	Radiola.....	2330	Sabre.....	2431
Online.....	2113	Plu2.....	2225 (DB1)	Radiomarelli.....	2331	Sagem.....	2434
Ormond.....	2114	Pointer.....	2229	Radionette.....	2332	Saisho.....	2437
Orson.....	2115	Polaroid.....	2230			Saivod.....	2439

Sakura.....	2441	Serino	2539	Songdian.....	4136	Supervision.....	2791
Salora.....	2443	Servi Sat.....	3721	Soniko.....	2669	Supra.....	2792
Sambers.....	2445	Shanghai	2547	Sonitron.....	2671	Supratech	2793 (DB1)
Sampo.....	2446	Shanshui	4133	Sonneclair.....	2673	Susumu	2797
Samsung.....	2448	Shaofeng	2549	Sonoko.....	2675	Sutron.....	2798
Samurai.....	2451	Sharp.....	2550	Sonolor.....	2676	Swedx.....	2803 (DB1)
Sandra.....	2454	Shencai.....	2553	Sontec.....	2677	Swissflex.....	2805 (DB1)
Sansui.....	2458	ShengCai.....	4217	Sontech.....	3435	Swisstec.....	2806 (DB1)
Sanwa.....	2461	Shenyang.....	2555	Sony.....	2679	Sydney.....	2808
Sanyo.....	2462	Sherwood.....	2557	Sound & Vision.....	2680	Sylvania.....	2809
Sanyuan.....	2464	Shinelco.....	4074 (DB1)	Soundmaster.....	2685	Symphonic.....	2810
SAT.....	2470	Shintom.....	2563	Soundmax.....	2687	Synn.....	2813
Sat Control.....	2471 (DB1)	Shintoshi.....	2564	Soundwave.....	2689	Sysline.....	2815
Sat Cruiser.....	2472	Shivaki.....	2567	Soyo.....	2693 (DB1)	Systec.....	2816
Sat Partner.....	2473	Shorai.....	2569	Spectra.....	2697	Sytech.....	2819 (DB1)
Sat Team.....	2474	Siam.....	2572	SR.....	2704	Sytong.....	2820
Satbox.....	2476	Siarem.....	2573	Srypton.....	4138		
Satcom.....	2477	Siemens.....	2574	Standard.....	2713		
Satec.....	2479	Siera.....	2576	Star Cluster.....	3724	T	
Satel.....	2480	Siesta.....	2577	Star Trak.....	2720 (DB1)	T.D.E. Systems.....	2822
Satelco.....	2481	Sigmathek.....	2580	Starcom.....	2722	Tactus.....	2825
Satford.....	2483	Silva.....	2591	Stargate.....	2723	Taishan.....	2835
Satline.....	2484	Silva Schneider.....	2592	Starland.....	2726	Taisho.....	2836
Satmaster.....	2485	Silver.....	2594	Starlite.....	2728	Tandberg.....	2842
Satplus.....	2486	Singer.....	2599	Starmedia.....	2730	Tandy.....	2843
Saville.....	2491	Sinudyne.....	2601	Starring.....	2733	Tantec.....	2845
SBR.....	2492	Skantic.....	2605	Start Trak.....	3725	Tashiko.....	2850
ScanMagic.....	2496	Skantin.....	2606	Stenway.....	2739	Tatung.....	2852
Schacke.....	3720	Skardin.....	2607	Stern.....	2741	TBoston.....	2853 (DB1)
Schaub Lorenz.....	2500	Skinsat.....	3722	Strato.....	2745	TCL.....	2856
Schneider.....	2501	SKR.....	2608	Stream System.....	3675 (DB1)	TCM.....	2857
Schoentech.....	3504 (DB1)	SKY.....	2610	Strong.....	2748	Teac.....	2860
Schwaiger.....	2502	Sky Digital.....	3723	STV.....	2751	Teachimagen.....	4140
Scientific Atlanta.....	2503	Sky Germany.....	4443 (DB1)	Stylandia.....	2752	Tec.....	2861
Scientific Labs.....	2504	SKY Italia.....	2612 (DB1)	Sumida.....	2756	Tech Line.....	2863
Scott.....	2508	SkyCable.....	2617	Sungoo.....	3767 (DB1)	Techica.....	2865
SCS.....	2510	Skymaster.....	2621	Sunkai.....	2762	Technema.....	2866
Sedeia Electronique.....	2518	Skymax.....	2622	Sunny.....	2764 (DB1)	Technica.....	2868 (DB1)
Seeltech.....	2519	SkySat.....	2625	Sunny Sound.....	2765	Technical.....	3888 (DB1)
Seemann.....	2521	Skyvision.....	2630	Sunsat.....	2767	Technics.....	2869
SEG.....	2522	Skyworth.....	2631	Sunstar.....	2768	Technika.....	2870
SEI.....	2524	SL.....	2632	Sunstech.....	2769 (DB1)	Techniland.....	2872
Sei-Sinudyne.....	2525	Slim Art.....	2636	Suntronic.....	2770	TechniSat.....	2873
Seitech.....	3433 (DB1)	SM Electronic.....	2639	Sunwood.....	2772	Technisson.....	2874
Seleco.....	2528	Smart.....	2642	Super Sat.....	2775	Technology.....	3726
Sencora.....	2531	S-Media.....	3515 (DB1)	Superla.....	2782	Technosat.....	2877
Sentra.....	2534	Sogera.....	2649	Supermax.....	2783	Technotrend.....	2879
Sentron.....	4216	Solavox.....	2654	Supersonic.....	2787	Technowelt.....	2881
Septimo.....	2536	Sonawa.....	2663	SuperTech.....	2789	Techvision.....	4307 (DB1)
						Techwood.....	2884 (DB1)

Teco.....	2886	Tioko.....	2989	Uniden.....	3101	Visual Innovations... 4773	(DB1)			
Tedelex.....	2889	Tiscali.....	3442	Union.....	3781	Vivanco.....	3209			
Tee-Comm.....	2890	Tividi.....	3443	(DB1)	Unisat.....	3104	Vivax.....	3601	(DB1)	
Teknika.....	2895	Tivo.....	2991	(DB1)	United.....	3106	Vivid.....	3210		
Telanor.....	3727	TNT.....	4184	United Cable.....	3108	Vodafone.....	4944	(DB1)		
Telasat.....	2897	Tobo.....	2999	United Quick Star..	4226	Volcasat.....	4053	(DB1)		
Tele+1.....	2900	Tocom.....	3000	Unitor.....	3110	Vortec.....	3217			
Teleavia.....	2901	Tokai.....	3001	Unity DigitalTV.....	4863	(DB1)	Voxson.....	3220		
Teleciel.....	2903	Tokyo.....	3004	Unitymedia.....	4328	(DB1)	VTech.....	3222		
Telecom.....	2906	Tomashi.....	3006	Universal.....	3113					
Telecor.....	2910	Tonna.....	3011	Universum.....	3115	W				
Teledirekt.....	2912	Tonsai.....	4223	Univox.....	3116	Waitec.....	3227			
Telefonica.....	2913	Top Suxess.....	3013	UPC.....	3118	(DB1)	Waltham.....	3230		
Telefunken.....	2914	Topfield.....	3014				Watson.....	3233		
Telefusion.....	2915	Torx.....	3020	V			Watt Radio.....	3234		
Telegazi.....	2917	Toshiba.....	3021	V7 Videoseven.....	3130	(DB1)	Wega.....	3238		
Telegent.....	2918	Towada.....	3028	Variosat.....	3134		Wegavox.....	3239		
Teleka.....	2919	Towika.....	4224	VEA.....	3957	(DB1)	Wela.....	3730		
Telemaster.....	2922	Toyoda.....	3030	Vector.....	3136		Welkin.....	3242	(DB1)	
Telemeister.....	2924	TPS.....	3032	Vega.....	3138		Wellington.....	3243	(DB1)	
Telenet.....	2925	Trakton.....	3036	Ventana.....	3142		Welltech.....	3244		
Telepiu.....	2926	Trans Continen.....	3037	Vestel.....	3148		Weltblick.....	3245		
Telesat.....	2928	Transfec.....	4143	Vexa.....	3149		Weltstar.....	3247	(DB1)	
Telesonic.....	2930	Transonic.....	3041	Via Digital.....	3729		Weston.....	3251		
Telestar.....	2931	Transtec.....	3042	Viasat.....	3153		WestStar.....	3519	(DB1)	
Telesystem.....	2933	(DB1)	Triad.....	3049	Vibrant.....	3154	Wetekom.....	3252		
Teletech.....	2934	Triasat.....	3050	Victor.....	3155		Wevasat.....	3253		
Teleton.....	2935	Triax.....	3051	Videologic.....	3165		Wewa.....	3254		
Televés.....	2937	Trident.....	3054	Videologique.....	3166		Wharfedale.....	3255		
Televideon.....	2938	Trio.....	3056	Videon.....	4227		White Westinghouse			
Television.....	2939	Tristar.....	3057	Videosat.....	3170		3258		
Televiso.....	2941	Triumph.....	3058	VideoSystem.....	3172		Wilson.....	3260	(DB1)	
Telewest.....	2942	TruVision.....	3061	Videotechnic.....	3173		Windsor.....	3265	(DB1)	
Telewire.....	2943	TSM.....	3065	Videoton.....	3174		Windstar.....	3266		
Temco.....	2946	Tudi.....	3068	Videoway.....	3176		Winersat.....	3269		
Tempo.....	2949	Turnsat.....	3071	VideoWorks.....	3177		Wintel.....	3271	(DB1)	
Tennessee.....	2952	TVA.....	4225	Vidtech.....	3179		Wintergarten.....	3272		
Tenosal.....	2953	TVB.....	3078	(DB1)	Viewmaster.....	3182	Wisi.....	3273		
Tensai.....	2954	TVE.....	3897	(DB1)	Viewsonic.....	3186	Wittenberg.....	3731		
Tenson.....	2955	TVonics.....	3080	Viewstar.....	3187		Woorisat.....	3280		
Tesla.....	3680	(DB1)	Twiner.....	3083	Viore.....	3192	(DB1)	World-of-Vision.....	3282	(DB1)
Tesmet.....	3550				Virgin.....	4185	(DB1)	Worldsat.....	3283	
Tevion.....	2962	U			Visiola.....	3197		Woxter.....	3286	
Texet.....	2963	UEC.....	3088		Vision.....	3198				
Thes.....	3769	(DB1)	Uher.....	3089	Visionetics.....	3199				
Thomson.....	2972	Ultravox.....	3095		Visionic.....	3200	X			
Thorens.....	2973	Umax.....	3098		Visiopass.....	3203	Xbox.....	3295		
Thorn.....	2974	UMC.....	3099	(DB1)	Visiosat.....	3204	Xcom Multimedia... 4000			
Tiankeban.....	4142	Unic Line.....	3100		Vistar.....	3207	Xiahua.....	3299		
							Xiangyu.....	3302		

Xingfu	3305
Xinghai	3306
Xinrisong	3308
XLogic	3310
XMS	3312
Xoro	3315
Xrypton	3317
Xsat	3318
Xtreme	3319 (DB1)
Xuelian	3320

Y	
Yakumo	3324
Yamada	3325
Yamaha	3326
Yamakawa	3327
Yamishi	3328
Yokan	3335
Yoko	3336
Yorx	3340
Yuhang	3345
Yukai	3346
Yüsmart	4777 (DB1)

Z	
Zanussi	3349
Zaunkonig	3352
Zehnder	3353
Zenith	3356
ZhuHai	3364
Ziggo	4007 (DB1)
Zinwell	3365
Zodiac	3366
Zwergnase	3371

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:




Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

(DB1) Brands only available from version DB1 onwards.

 You can find the DB version on the sticker inside the battery compartment.

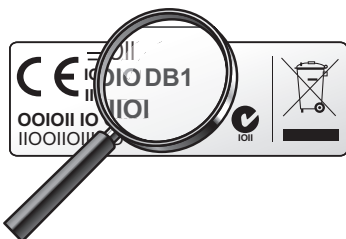



© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5218 4

November 2011

www.philips.com

RTP/4811