

ISEL Code List TV - Lista de Códigos TV

ABEX	0345	CORTEX	0250	GO VIDEO	0002, 0348, 0382	0083, 0206, 0235, 0280	
ACCESS HD	0222	CRAIG	0285, 0355	GOLDSTAR	0140, 0334, 0335, 0363	0330, 0345, 0360, 0371	
ACER	0417, 0418	CROSLEY	0017, 0004, 0072, 0074	0366	0399, 0427, 0429, 0435	0399, 0427, 0429, 0435	
ACTION	0355		0120	GOLDTEXT	0078	0436, 0438, 0439	
ADMIRAL	0009, 0147, 0150, 0349	CROWN	0355	GOTECH	0078, 0080	0427, 0436, 0437, 0438	
ADVENT	0072, 0146, 0359, 0388	CTX	0366	GPX	0448	0439, 0460, 0618	
ADVENTURA	0428	CURTIS	0046, 0047, 0102, 0166	GRADIENTE	0090	PHILIPS MAGNAVOX	0079
AFFINITY	0270, 0166, 0046, 0170		0169, 0187, 0193, 0195	GRUNPY	0355	PIONEER	0024, 0102, 0274, 0031
AIKO	0361		0227, 0231, 0251, 0389	H & B	0285		0036, 0152, 0153, 0229
AIWA	0358, 0114, 0355, 0460		0396, 0445, 0450	HAIER	0021, 0102, 0333, 0339		0460, 0618, 0626
	0618			0402, 0098, 0133, 0134	HATSUSHITA	0092, 0095, 0096	
AKAI	0410, 0309, 0002, 0058			0388	MAXENT	0171, 0235, 0236, 0237	
0100, 0106, 0308, 0381				0140	MB QUART	0137	
0403, 0404				0317	MEGAPOWER	0366	
AKAWA	0355			0355	MEGATRON	0020, 0140, 0366	
AKIBA	0072, 0379			0427	MEMOREX	0134, 0011, 0023, 0096	
AKIO	0121, 0348, 0359, 0362			0072, 0074	0106, 0114, 0140, 0145		
	0427			0355	0147, 0148, 0215, 0307		
AKIRA	0372			0427	0308, 0348, 0360, 0388		
AKISHI	0002			0009, 0150	0429, 0456, 0459		
ALBATRON	0366			HDTV	0115, 0148, 0215		
ALLEGRO	0009			HELIOS	0285		
ALUO	0615, 0621			HELLO KITTY	0121, 0279		
A-MARK	0348, 0368			HELWETT PACKARD	0203, 0419, 0458		
AMERICA ACTION	0025			HIDEAR	0224		
AMPRO	0353			HIMITSU	0355, 0364, 0376		
AMTRON	0355			HISENSE	0129, 0012, 0144, 0029		
ANAM	0092, 0096, 0345, 0355			0033, 0102, 0130, 0320			
	0366			0375, 0389, 0617			
ANHUA	0366			HITACHI	0020, 0024, 0048, 0049		
AOC	0019, 0205, 0075, 0076			0050, 0051, 0052, 0102			
0140, 0203, 0204, 0206				0114, 0152, 0337, 0427			
0217, 0245				0456, 0618			
AOMNI	0284			HITEKER	0114, 0103		
APEX	0059			HKPRO	0244, 0169, 0185, 0460		
APEX DIGITAL	0058, 0059, 0064, 0193			0618			
0196, 0287, 0288, 0374				HP	0203, 0419		
0375				HUMAX	0420		
ARIO	0193			HUNDAI	0208, 0328		
ARION	0218			IBEROSTAR	0264		
ASCENT	0141			ILO	0359, 0398, 0115, 0148		
ASTAR	0190, 0391			0296, 0304, 0310, 0360			
ASUS	0451			0399			
ATEC-PANDA	0411			INCO	0250		
ATVIO	0030, 0021, 0182, 0135			INFINITY	0072, 0074		
0022, 0038, 0186, 0231				INFOCUS	0108, 0285, 0332		
0238, 0243, 0244, 0282				INITIAL	0304, 0399		
0289, 0274, 0373, 0460				INSIGNIA	0011, 0210, 0003, 0028		
0614, 0616, 0618, 0621				0029, 0213, 0212, 0291			
0627, 0632, 0634, 0638				0294, 0304, 0360, 0381			
AUDIOVOX	0401, 0280, 0059, 0121			0382, 0396, 0438			
0137, 0209, 0278, 0279				INTEQ	0353		
0293, 0315, 0319, 0355				INTERVISION	0202		
0361, 0372, 0423, 0426				IRIS	0323		
0446				ISYMPHONY	0102, 0103, 0260		
AUMARK	0348			JBL	0072, 0074		
AURIA	0075, 0076			JC PENNEY	0068, 0140, 0145, 0348		
AURUS	0288, 0276			0349			
AVENTURA	0360			JCB	0004		
AVERA	0193			JCM	0242, 0323		
AVOL	0303			JEC	0072		
BATMAN	0397			JENSEN	0072, 0146, 0325, 0379		
BAYSONIC	0355			0396			
BELL & HOWELL	0114, 0456			JINXING	0070		
BENO	0160			JVC	0038, 0016, 0087, 0090		
BERKSHIRE	0109			0085, 0086, 0088, 0089			
BLU-SENS	0139, 0229, 0258, 0108			0091, 0095, 0147, 0148			
0176, 0201, 0257				0242, 0244, 0308, 0338			
BLUE LIGHT	0347, 0108, 0176, 0201			0345, 0388, 0460, 0618			
BLUE POINT	0348, 0355			0622, 0624, 0625, 0636			
BLUE SKY	0355			0002			
BRADFORD	0355			JWIN	0219		
BRILLIAN	0413			K VISION	0219		
BROKSONIC	0121, 0147, 0148, 0307			KC	0453		
0308, 0355, 0356, 0366				KDS	0023, 0167		
0433, 0456				KEC	0355		
CARVER	0072, 0074			KENWOOD	0004		
CCE	0078			KLH	0058, 0383		
CELEBRITY	0004			KODAK	0105, 0244, 0262		
CELERA	0058, 0068			KOLIN	0142		
CENTURY	0355, 0362			KONKA	0376, 0381, 0382		
CETRONIC	0355			KTV	0355, 0362		
CHAMPION	0114			KURAZAI	0456		
CHANGHONG	0058, 0068			LANIX	0136		
CHIO	0056			LASONIC	0283		
CINERAL	0121, 0361			LEGEND	0133, 0193		
CITIZEN	0123, 0147, 0308, 0348			LEXUS	0249, 0200, 0372		
0361, 0362, 0456				LG	0124, 0003, 0125, 0131		
0355				0126, 0132, 0135, 0140			
CLARION	0355			0143, 0346, 0353, 0354			
CLASSIC	0355			0363, 0366, 0457			
COBIA	0225, 0104, 0273, 0373			LG ALPS	0131		
COBY	0138, 0188, 0191, 0192			LLOYD'S	0427		
0197, 0207, 0305, 0321				LOGENET	0456		
0324, 0329, 0391, 0421				LODGINGSTAR	0326		
0422, 0442, 0443, 0444				LOEWE	0072, 0073, 0387		
0628				LOGIK	0456		
COLOMBIA	0072			LXI	0009, 0068, 0072, 0074		
COMMERCIAL SOLUTIONS	0108, 0109			0109, 0114, 0140, 0353			
CONTEC	0355			MAG	0023, 0167		
CONTEX	0250, 0251			MAGNASONIC	0123, 0428		
CONTINENTAL	0627, 0623			MAGNAVOX	0007, 0026, 0070, 0071		
CORNEA	0452			0072, 0073, 0074, 0079			

PHILIPS	0026, 0007, 0073, 0072	ROYAL	0072, 0355	SUPERSCAN	0150, 0282, 0360, 0438	0187, 0194, 0260, 0310
0071, 0074, 0077, 0078		RUNCO	0353, 0456	0439	0381, 0385, 0396, 0445	0381, 0385, 0396, 0445
0079, 0081, 0083, 0084		SABA	0092	SUPERSONIC	0004, 0134, 0187, 0194	0225, 0045, 0288, 0614
0115, 0156, 0157, 0206		SAMPO	0235	0261, 0326, 0355	0261, 0326, 0355	0235
0330, 0353, 0360, 0399		SAMSUNG	0002, 0025, 0032, 0101	SUPREME	0004	0187, 0327, 0391
0427, 0436, 0437, 0438			0095, 0099, 0100, 0106	SURE	0250	0074, 0109, 0110, 0106
0439, 0460, 0618			0140, 0154, 0155, 0213	SVL	0285, 0374, 0375, 0438	0127, 0128, 0006, 0173
			0346, 0427, 0348, 0440	SYLVANIA	0072, 0074, 0115, 0215	0282, 0313
			0447, 0630, 0631		0216, 0359, 0360, 0373	0203, 0400
PHILIPS MAGNAVOX	0079			VSONIC	0004, 0067, 0068, 0072	0074, 0109, 0114, 0140
PIONEER	0024, 0102, 0274, 0031			WARD	0152, 0345, 0348, 0350	0152, 0345, 0348, 0350
0036, 0152, 0153, 0229				WAYCON	0353, 0355, 0456	0353, 0355, 0456
0460, 0618, 0626				WEISSER	0199, 0187, 0189, 0408	0199, 0187, 0189, 0408
PLANAR	0019, 0152			WESTINGHOUSE	0245, 0042, 0043, 0102	0245, 0042, 0043, 0102
POLAROID	0040, 0229, 0256, 0135			0147, 0173, 0174, 0175	0193, 0238, 0239, 0255	0193, 0238, 0239, 0255
0102, 0167, 0169, 0178				0260, 0279, 0286, 0287	0275, 0387, 0392	0275, 0387, 0392
0228, 0273, 0285, 0293				TCL ROKU	0033	0033
0296, 0315, 0316, 0381				TECHNICS	0092, 0095, 0096, 0345	0092, 0095, 0096, 0345
0389, 0396, 0422, 0424				0353	0109, 0114, 0140, 0348	0109, 0114, 0140, 0348
0426, 0612, 0614, 0628				0359, 0360, 0362, 0413	0359, 0360, 0362, 0413	0359, 0360, 0362, 0413
0429, 0632, 0634				0427	0379	0379
PORTLAND	0121, 0278, 0279, 0361			SEIKO EPSON	0029	0029
0362				0102, 0108, 0109, 0130	0221	0221
PREVIEW	0023, 0167			SELECO	0058	0058
PRIMA	0011, 0133, 0134, 0146			SEMIPOX	0365	0365
0022, 0273, 0285, 0293				SEMP	0088	0088
0296, 0315, 0316, 0381				SENS	0133, 0137	0133, 0137
0389, 0396, 0422, 0424				SEURA	0009	0009
0426, 0612, 0614, 0628				SHARP	0009, 0129, 0617, 0149	0009, 0129, 0617, 0149
0429, 0632, 0634				0151, 0019, 0024, 0033	0151, 0019, 0024, 0033	0151, 0019, 0024, 0033
PORTLAND	0121, 0278, 0279, 0361			0340	0340	0340
0362				SHENG CHIA	0009, 0150	0009, 0150
PREVIEW	0023, 0167			SHOGUN	0348, 0355	0348, 0355
PRIMA	0011, 0133, 0134, 0146			SIGMAC	0060, 0265	0060, 0265
0022, 0273, 0285, 0293				SIGNATURE	0074	0074
0296, 0315, 0316, 0381				SIGNATURE2000	0009, 0145, 0456	0009, 0145, 0456
0389, 0396, 0422, 0424				SILO	0035, 0043, 0060, 0453	0035, 0043, 0060, 0453
0426, 0612, 0614, 0628				SILO DIGITAL	0035, 0043, 0060, 0453	0035, 0043, 0060, 0453
0429, 0632, 0634				SINGER	0072, 0121, 0348, 0359	0072, 0121, 0348, 0359
PORTLAND	0121, 0278, 0279, 0361			0362, 0364	0405, 0406, 0409	0405, 0406, 0409
0362				0427	0427	0427
PREVIEW	0023, 0167			SOLÉ	0057, 0284, 0285	0057, 0284, 0285
PRIMA	0011, 0133, 0134, 0146			SONY	0004, 0198, 0042, 0092	0004, 0198, 0042, 0092
0022, 0273, 0285, 0293				0427	0427	0427
0296, 0315, 0316, 0381				SOUNDESIGN	0140, 0355	0140, 0355
0389, 0396, 0422, 0424				SOYO	0217, 0218, 0259, 0302	0217, 0218, 0259, 0302
0426, 0612, 0614, 0628				0382	0382	0382
0429, 0632, 0634				SPECTRA	0185, 0243, 0184, 0242	0185, 0243, 0184, 0242
PORTLAND	0121, 0278, 0279, 0361			0250, 0622, 0624, 0625	0250, 0622, 0624, 0625	0250, 0622, 0624, 0625
0362				SPECTRIONIC	0366	0366
PREVIEW	0023, 0167			SPECTRONIQ	0023, 0167	0023, 0167
PRIMA	0011, 0133, 0134, 0146			SPELER	0252, 0102, 0262, 0268	0252, 0102, 0262, 0268
0022, 0273, 0285, 02						